

## **INDIVIDUAL CAGE EUTHANASIA**

- **Turn green flowmeter to 6L/min.**
- **Turn off flowmeter after use.**
- **DO NOT turn on flowmeter when Euthanex machine is running.**
- **DO NOT ever turn wall-mounted valve.**

SC #238.1  
Eff 5/20

3.5" x 5" horizontal template  
Inner box dimensions 3.2" x 4.6"  
Outer box dimensions 3.5" x 4.8"